




Installation Instructions
Gun Boot® IV Mount for Bed Rails (20129)
 (Fits Kawasaki Mule, John Deere Gator, and others)

Your new Gun Boot® IV Case Mounting Bracket is perfect for attaching to the bed rails of utility ATV's. When you open your bracket, please make sure the following items are enclosed in your box before beginning.

Part	Description	Quantity
A	Rear Bracket	1
B	Front Bracket	1
C	5/16"-1" SAE bolt	2
D	5/16" USS flat washer	4
E	5/16" SAE locknut	2
F	Drilled Pin	1
G	Clevis Pin	1
H	3/8"-1" SAE bolt	2
I	3/8"-1" SAE Locknut	2
J	3/8" USS flat washer	4

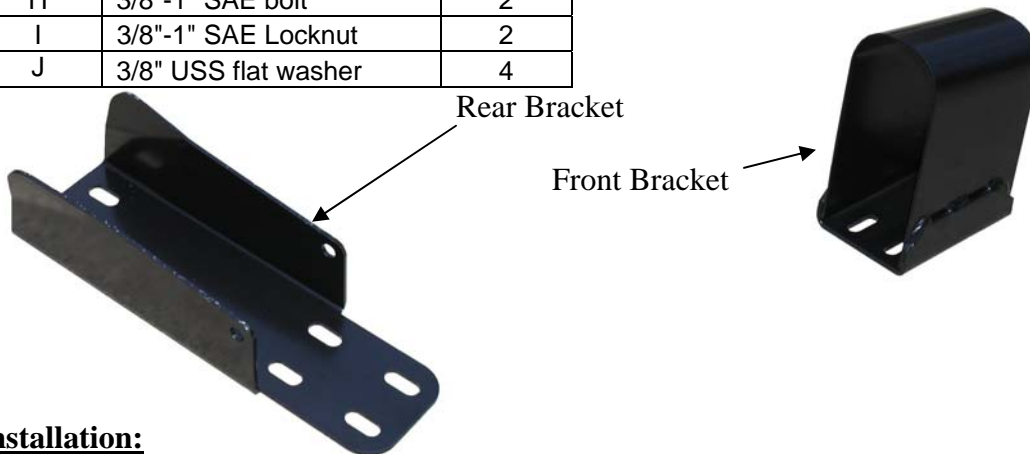

Installation:

Note: The mounting brackets can be mounted to either side of the bed rail.

1. Position Rear Mounting Bracket on bottom of Gun Boot IV so that the Drilled Pin goes through the center hole of bottom of Gun Boot IV. Place Front Mounting Bracket on muzzle end of Gun Boot IV. Align Gun Boot IV and both brackets on side rail and mark the bolt hole positions. (Distance between the brackets should be about 11.25in.)



2. Drill 4 bolt holes in side rail (2 for Front Bracket and 2 for Rear bracket).
3. Mount the Front Bracket to the side rail using the 5/16" nuts, bolts, and washers.
4. Mount the Rear Bracket to the side rail using the 3/8" nuts, bolts, and washers.
5. Slide muzzle end of Gun Boot IV into front Bracket so that you may pin the Gun Boot IV into the Rear Bracket. Your Gun Boot should look like the following when properly mounted:



For additional assistance, please contact our customer service department at (877)-9KOLPIN or customerservice@kolpin.com.